## **Installation Instruction**

(VW T5)

### **Precautions**

- All pictures in the manual are for reference only. Pictures and objects may differ, but the installation method is the same.
- In order to facilitate your installation, please carefully read the product manual before installation; When installing, protect your car's surface and avoid scratching.
- Please check regularly if all accessories connected with the car are loose to ensure safety.

# **Installation Steps**

Refer to the parts list and accessroy drawings to check if the accessories are complete. After the product is installed, press the tailgate button for 3-5 seconds. You will hear a sound "DI——" and then loose your hand. Press the tailgate button again and close it. You will hear two sounds. Tail gate learning is finished.




1. Original car renderings.



2. Open the original tailgate renderings.




3. Remove the tailgate lone plaque.

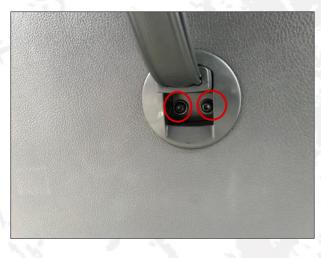

4.Remove the two fixing screws of the tailgate trim.



5. Remove the tailgate cover.

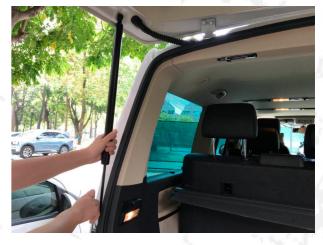

6.Remove the original car poles.



7.Remove the original car body ball head and install our car body ball head.



8. After installing. (Noted: Replace the following body ball head as shown!)



9. Install our electric poles.



10. Unplug the original car lock power cord, the milky white wire cuts off the output and connect with the orange power output line of our lock-up cable.



11. Unplug the white wire on the right side of the original car lock signal plug and connect the blue wire of our lock switch cable.



12. As shown by the arrow, control box connect with the brown ground wire of the original car wiper motor plug.






13. Fix the control box and connect the harness.



15. Thread the harness from the waterproof bellows to the car body.

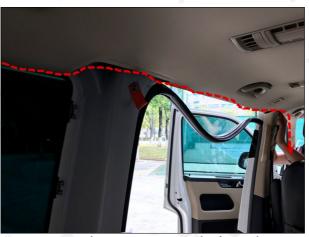

17. Route the power and signal lines to the main driver's seat.



14. Thread the power and signal


16. Remove the left side trim panel and thread the harness to the main driving position.



18.Remove the bottom cover under the steering wheel and find the twisted wire harness as shown (CAN H is connected to the original car light color line, CAN L is connected to the original car dark line).



19. Signal line power line is wired on OBD as shown.





21. Take power under the main driver's seat of the control box power cord.



22. The switch is punched in this position.



23.Restore parts, installation is complete.

After the installation is complete, you must set the tailgate learning. Make sure that the door can be opened and closed in place. (Raise the tailgate to ideal height. Then press the tailgate button for 3-5 seconds. You will hear a sound "DI——" and then loose your hand. Press the tailgate button again and close it. You will hear two sounds "DI DI". Tail gate learing is finished.) If you do not hear two sounds, learning is unsuccessful and you need to re-learn. If you can not close the door, use your hand to push the door to close when you are learning.

#### Disclaimer

Due to improper installation and improper use, caused the relevant issues and losses, these not include within our company 's warranty. Thanks for your purchasing our products. Please read the manual carefully before use and collect it for later reference.

## **Key Control Method**

- 1. Press the original Key fobs three times to open and close the door.
- 2. Press the front switch button to open and close the door.

# Setting Height

- 1. Raise the tailgate to the ideal height;
- 2. Press the tailgate switch for 3-5s;
- 3. When you hear a long sound "Di——", loose your hand and press the tailgate switch again to close the door.
- 4. When you hear two sounds "Di Di", Setting height is finished.

Note: Do not close the door with your hands after setting the ideal height. Be sure to use our own tailgate switch.

### **Fault Solution**

The original key fob does not work	Check if the yellow central control line is
	connected.
1	1. Check if the positive power supply is
Not working after installation	connected with 12V-16V.
2-th - 1-th	2.Check if the power fuse is inserted.
- 11 44 1	3. Check if the ground wire is connected.
102	1. Check if the left and right bracket are installed
The state of the s	reversed.
Closing the tailgate not in place	2. Check if the control box wire is inserted.
	3. Check if the brackets are fixed with our
The tailgate can only open to half	screws.
U.S.	4. There are two rubbers on the left and right
3	sides of the original tailgate cover. Check if
. > /1 1	they are loose and need to be tightened.

All rights reserved.